
ADAPTA+

Floor-standing shower toilet

Product code: WG-AF200
Version: 10/2026

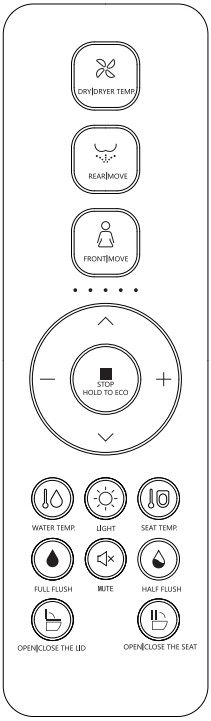

Remote control instructions

Floor-standing model

Thank you for choosing our product.
Please read the instructions carefully before installation
and keep them for future maintenance or reference.

Installation · functions · pairing · maintenance

Latest manual online

www.watergate.cz

Contents

Remote control installation 01

Batteries and button reference 02

Remote control illustration 03

Washing, drying and nozzle adjustment 04

Energy, temperatures, lighting and flushing 05

Lid, flush settings and remote pairing 06

Other operations and foot sensor 07

Tank flushing, descaling and remarks 08

WG-AF200 | ADAPTA+


Remote control instructions - English edition

Remote control holder installation 1 (screws)

1. Drill a 6 mm diameter hole in the wall to a depth of about 35 mm.

2. Remove the double-sided adhesive tape on the back of the holder.

3. Install an anchor into the hole, stick the holder to the wall and secure it with screws, then stick the patch with tape.

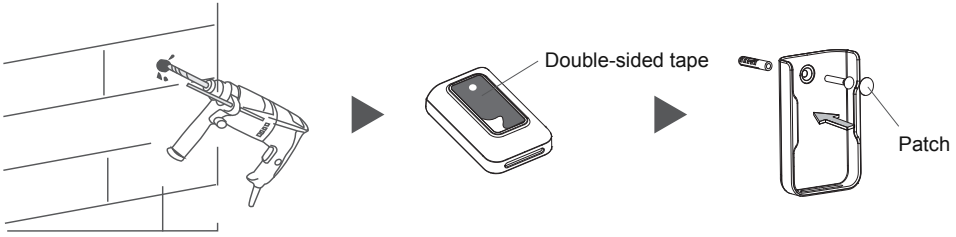


Remote control holder installation 2 (adhesive)

1. Clean and dry the pre-installation area of the holder.


2. Remove the double-sided adhesive tape on the back of the holder.

3. Stick the holder to the wall vertically and then stick the patch with tape.

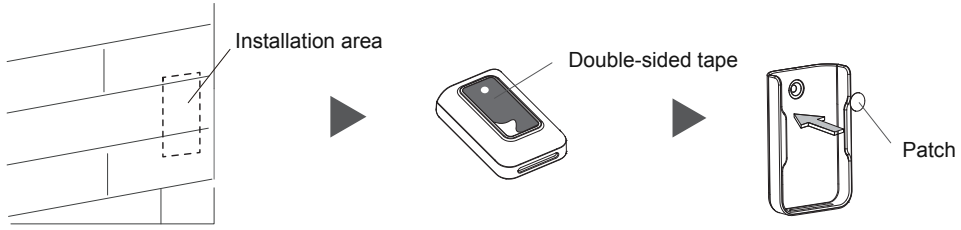

Battery installation

1. Insert 2 × AAA batteries into the remote control.
2. Put the remote control into the holder.

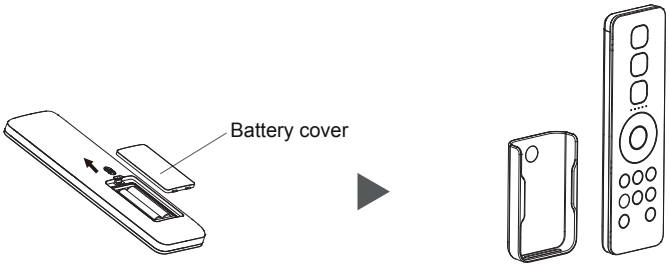

Notice

• Please ensure the remote control is within reach when a person is on the seat.


• Do not install and use the product in damp places such as a shower room.

• Do not place the product in a place where it is easily exposed to water.

Button reference

Button	Function
DRY / DRYER TEMP.	Drying / dryer temperature
REAR / MOVE	Rear washing / oscillating washing
FRONT / MOVE	Front washing / oscillating washing
Indicator lights	Current level of the selected function
∧ / ∨	Nozzle moving forward / backward
+ / −	Water increasing / reducing
■ STOP (HOLD TO ECO)	Stop / energy saving
WATER TEMP.	Water temperature
LIGHT	Night light
SEAT TEMP.	Seat temperature
FULL FLUSH / HALF FLUSH	Full flush / half flush
MUTE	Quiet mode
OPEN / CLOSE THE LID	Open / close the lid
OPEN / CLOSE THE SEAT	Open / close the seat

Remote control illustration

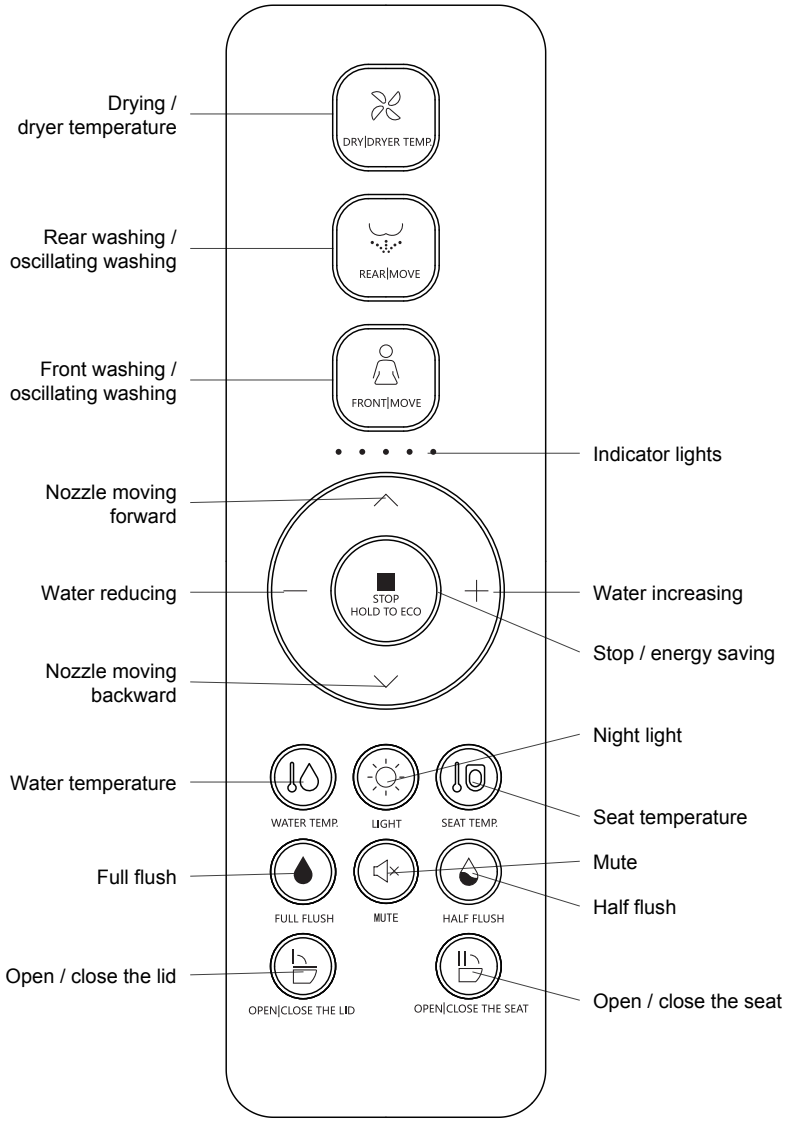

See the button reference on page 02 for the function names.

Rear / Front washing

Notice

• Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.

• The nozzle will continue to spray for 1-2 seconds after the user stands up during washing, so please press the ■ STOP button before standing up.

Rear washing: Press the REAR / MOVE button; the indicator light shows the current water temperature level and rear washing starts. Press the REAR / MOVE button again to shift to oscillating washing (the nozzle moves forward and backward to expand the washing area). Washing stops automatically after one cycle, or immediately when the user presses the ■ STOP button.

Front washing: Press the FRONT / MOVE button; the indicator light shows the current water temperature level and front washing starts. Press the FRONT / MOVE button again to shift to oscillating washing. Washing stops automatically after one cycle, or immediately when the user presses the ■ STOP button.

Drying / Dryer temperature

1. Press the DRY / DRYER TEMP. button; the indicator shows the current air temperature level. Drying stops automatically after one cycle or after leaving the seat.

2. During drying, press the DRY / DRYER TEMP. button to adjust the air temperature between level 0 and level 5; the indicator light shows the air temperature level. When the indicator light is off, the temperature is at level 0 (room temperature).

Water volume adjustment

Press the + or − button during rear or front washing; the indicator light shows the current water volume level and the water volume can be adjusted (5 levels).

Nozzle position adjustment

Press the ∧ or ∨ button during rear or front washing; the indicator light shows the current nozzle position, which can be adjusted in 5 levels.

Energy saving

1. Long press the ■ STOP button to enter energy saving mode; the buzzer beeps once.

2. Long press the ■ STOP button again to exit energy saving mode; the buzzer beeps twice.

Remark: Energy saving mode is suspended and the product enters functional mode when the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and energy saving mode is restored once the seat is no longer being used. In energy saving mode the seat temperature is set to level 1 (if the seat temperature before energy saving was neutral, it stays neutral).

Water temperature adjustment

Short press the WATER TEMP. button to adjust the water temperature between level 0 and level 5. The indicator light shows the current water temperature level; when the indicator is off, the temperature is at level 0 (unheated water).

Seat temperature adjustment

Short press the SEAT TEMP. button to adjust the seat temperature between level 0 and level 5. The indicator light shows the current seat temperature level; when the indicator is off, the temperature is at level 0 (room temperature).

Night light

Night light adjustment: short press the LIGHT button to turn the night light on or off.

Intelligent mode: long press the LIGHT button to enter intelligent mode (the night light turns on or off depending on the surrounding light). In intelligent mode, short press the LIGHT button to exit intelligent mode. (Factory setting: intelligent mode.)

Half flush / Full flush

1. Short press the HALF FLUSH button to start a half flush.

2. Short press the FULL FLUSH button to start a full flush.

3. Long press the FULL FLUSH button to turn on the auto flush function; the buzzer beeps once.

4. Long press the FULL FLUSH button again to turn off the auto flush function; the buzzer beeps twice.

When the auto flush function is turned on, the toilet flushes automatically after detecting that the user has left the seat.

Auto lid open/close

1. Short press the OPEN / CLOSE THE LID button to open or close the lid.

2. Short press the OPEN / CLOSE THE SEAT button to open or close the seat.

3. Long press the OPEN / CLOSE THE LID button to turn on the auto opening function; the buzzer beeps once.

4. Long press the OPEN / CLOSE THE LID button again to turn off the auto opening function; the buzzer beeps twice.

Quiet mode

Short press the MUTE button to turn quiet mode on or off.

Water tank flush volume adjustment

• Press and hold the FULL FLUSH button and press the water volume + button to increase the full flush volume by 1 level.

• Press and hold the FULL FLUSH button and press the water volume − button to reduce the full flush volume by 1 level.

• Press and hold the HALF FLUSH button and press the water volume + button to increase the half flush volume by 1 level.

• Press and hold the HALF FLUSH button and press the water volume − button to reduce the half flush volume by 1 level.

User code (pairing the radio frequency remote control)

1. Shut off the power supply of the toilet.

2. Press and hold the ■ STOP and REAR / MOVE buttons simultaneously. The indicator light will flash.

3. Reconnect the power plug.

4. The indicator stops flashing and stays on for 2 seconds, indicating that the remote control and the toilet are matched successfully. The toilet beeps once when the self-inspection completes. The remote control is then ready for use.

Note: If there are other identical toilets nearby, disconnect them from the power supply during pairing.

Sterilization function

When no one is seated and washing/drying is off, long press the DRY / DRYER TEMP. button to turn on the plasma sterilization function. The function stops automatically after 2 hours. In this mode, if any other button is pressed or the user sits down, sterilization stops automatically.

Automatic pre-wetting function

1. Press the ■ STOP button first, then press the FULL FLUSH button to turn on the auto pre-wet function; the buzzer beeps once.

2. Press the ■ STOP button again, then press the FULL FLUSH button to turn off the auto pre-wet function; the buzzer beeps twice.

When the auto pre-wet function is turned on, the ceramic bowl is pre-wetted as soon as the toilet detects that the user is sitting.

Foot sensor function

1. Long press the HALF FLUSH button to turn on the foot sensor; the buzzer beeps once.

2. Long press the HALF FLUSH button again to turn off the foot sensor; the buzzer beeps twice.

In the seated state the foot sensor is inactive.

Foot sensor indicator

1. Press the ■ STOP button first, then press the HALF FLUSH button to turn on the foot sensor indicator light; the buzzer beeps once.

2. Press the ■ STOP button again, then press the HALF FLUSH button to turn off the foot sensor indicator light; the buzzer beeps twice.

Electronic bidet tank flushing

Press and hold the HALF FLUSH and FULL FLUSH buttons simultaneously for longer than 3 seconds to start flushing from the water tank of the electronic bidet.

Water tank descaling

When no one is seated, press and hold the WATER TEMP. and FULL FLUSH buttons for longer than 3 seconds to drain the water tank. Empty the water tank and pour in 125 mL of descaling agent. Press the button combination again to start the descaling function; it stops automatically after 30 minutes. Do not cut off water and electricity during descaling.

Remarks

• The buzzer beeps once when the user presses a button, indicating that the main unit has received the signal and carries out the operation. If the buzzer does not sound, the main unit has not received the signal; adjust the direction of the remote control and press the button again.

• In case of a power cut during nozzle spraying, the wand cannot be retracted; please wait until the power is restored. In case of a long power cut, push the wand softly back by hand. Do not push hard, to avoid damage to the wand and the electrical mechanism.

The picture of the product may not be entirely consistent with its actual appearance and colour because of product improvements.